






**REMODEL MARKET**  
Home Improvement Made Easy

## Countertop Support Mounting Instructions

*(Mounting prior to countertop installation)*

- 1) Determine where support brackets are to be located.
- 2) For maximum strength, locate brackets over stud or frame.
- 3) Determine distance between Keyslots (A) on back of support.
- 4) Measure from top of narrow slot (B) on upper keyslot to top of narrow slot (C) on lower keyslot (spacing).
- 5) Measure from top edge of Countertop Support (D) to top edge of upper keyslot opening (B) (offset).
- 6) Mark offset and spacing locations where Countertop Supports are to be located.
- 7) Install screws (#8 x 2" minimum) at marked locations, do not fully tighten.
- 8) Leave 1/8" of screw protruding from surface to allow for bracket engagement.
- 9) Align Keyslots over screw heads and slide Countertop Support down.
- 10) Countertop Support should be snug against mounting surface.
- 11) If support is not snug, remove support and tighten screws slightly and reattach.
- 12) Adjust screws until a snug fit is achieved.
- 13) Install Counter.

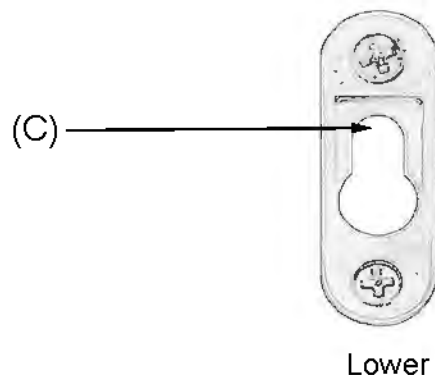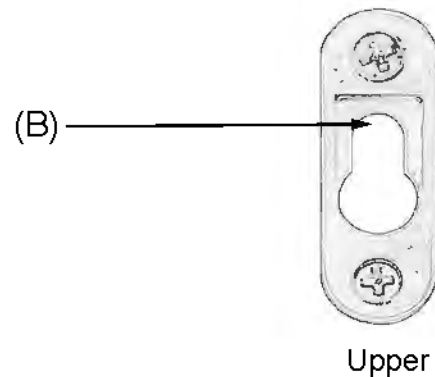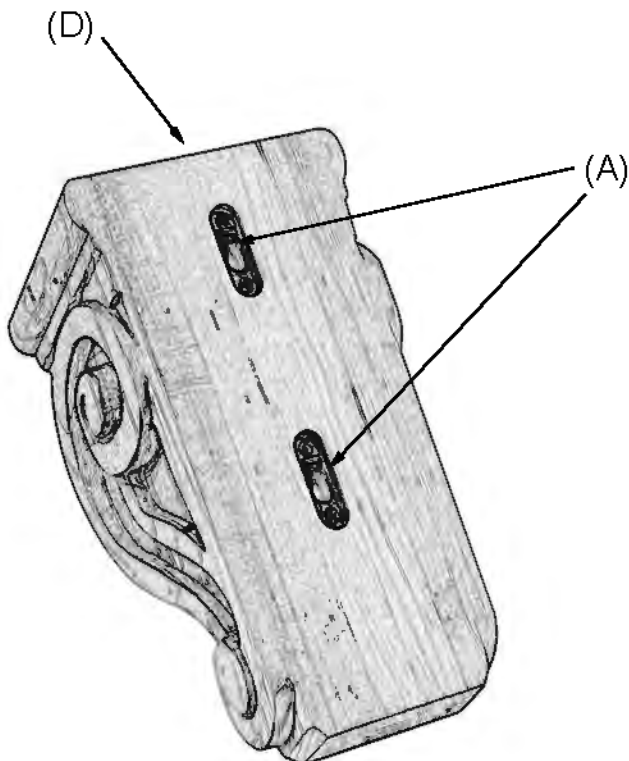



**REMODEL MARKET**  
Home Improvement Made Easy

## Countertop Support Mounting Instructions

*(Mounting under existing countertop)*

- 1) Determine where support brackets are to be located.
- 2) For maximum strength, locate brackets over stud or frame.
- 3) Remove existing Keyslot Brackets (A) from back of Countertop Support.
- 4) Turn Keyslot Brackets upside down and reinstall into back of Countertop Support.
- 5) Determine distance between Keyslots on back of support.
- 6) Measure from top of keyslot opening (B) on upper keyslot to top of keyslot opening (C) on lower keyslot (spacing).
- 7) Measure from top edge of Countertop Support (D) to bottom edge of upper keyslot opening (E) (offset).
- 8) Mark offset and spacing locations where Countertop Supports are to be located.
- 9) Install screws (#8 x 2" minimum) at marked locations, do not fully tighten.
- 10) Leave 1/8" of screw protruding from surface to allow for bracket engagement.
- 11) Align Keyslots over screw heads and slide Countertop Support up.
- 12) Countertop Support should be snug against mounting surface.
- 13) If support is not snug, remove support and tighten screws slightly and reattach.
- 14) Adjust screws until a snug fit is achieved.
- 15) Remove Countertop Support.
- 16) Apply bead of construction adhesive to top and back of Countertop Support.
- 17) Reinstall Countertop Support.
- 17) Install Counter.

